


## Lacanche range

### Gas oven - thermocouple adjustment / replacement

- 1 – Shut off power to the range. Remove the oven door, oven sole and the storage drawer
- 2 – Remove the perforated panel by removing the 2 screws from the inside of the oven. Pull the perforated panel forward to remove it

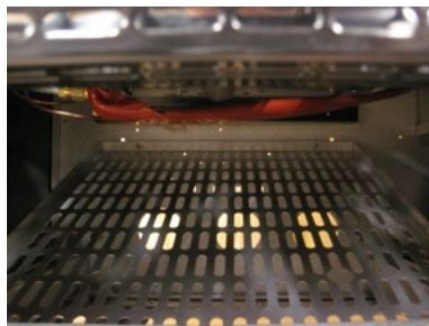

Note: on newer ranges, the screws are accessed from underneath (drawer opening)

- 3 - Locate the thermocouple and loosen the back nut. Push the thermocouple up so that the tip is less than 1mm from the burner, but not touching it. If replacing the thermocouple, see below.



The tip of the thermocouple should NOT touch the burner

- 4 - Tighten both nuts to maintain the thermocouple in the correct position.
- 5 - Reinstall the perforated panel, oven door and drawer.
- 6 - To test the adjustment, turn on the oven for 5-10 minutes, then bring the knob to LOW. The flame should go to its low position, and the tip of the thermocouple should be fully engulfed. It may be necessary to also adjust the low setting on the gas valve, please refer to your range's owners manual.

To replace the thermocouple:

- open the rangetop, disconnect the thermocouple from the back of the gas oven valve
- remove the thermocouple, and run the new one following the same path.
- connect the new thermocouple to the gas valve and install in the oven as per above.

For any questions, please call 855-552-6476 or email [support@french-barn.com](mailto:support@french-barn.com)

# Oven Door Removal & Installation



## To remove the oven door:

1. Open the oven door fully
2. Lift the locking tab to lock each hinge in position


Tab in the “lock” position



3. With the hinges locked, lift and pull the door to remove it

## To re-install the oven door:

1. With the hinges and tabs still in the “lock” position, place the door in position by lining up the hinges with the slots in the oven frame.
2. Note the slot at the bottom of the hinge. This slot sits over the oven frame. When placed correctly, there should be a small space between the bottom of the open door and the oven frame.

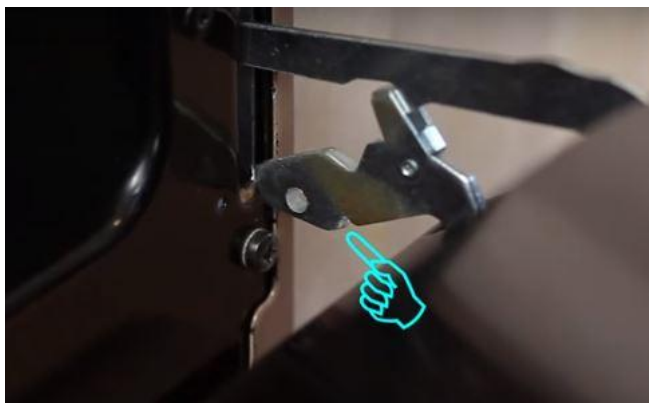

2. Once the door is in place, unlock the hinges by lowering the tab. Do not try to close the door before unlocking the hinges.
3. Close the door, making sure that it is properly aligned and not scraping against another oven door or lower drawer.

## Lacanche Stove - Lifting the Rangetop

---

**Shut off electrical power to the range and shut the gas valve to the range.**

1. Loosen the vertical rod on the far left side. (Figures 1 and 2)

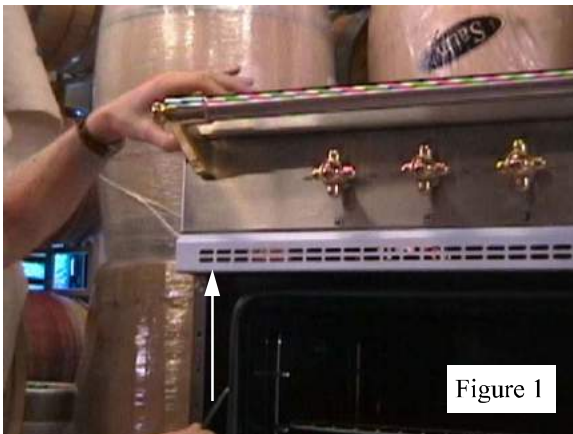


Figure 1

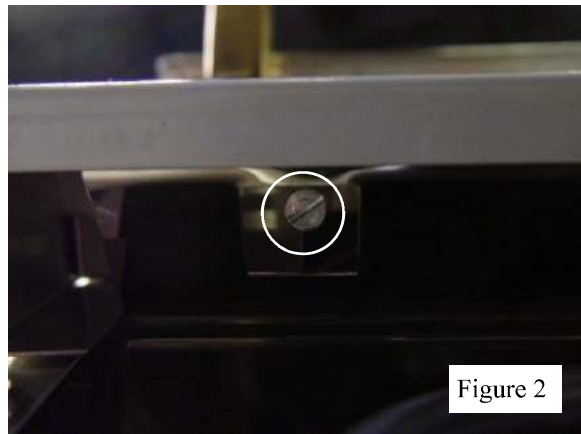


Figure 2

(Figure 2 is a view from the floor looking up)

2. Loosen the vertical rod on the far right side. (Figures 3 and 4)

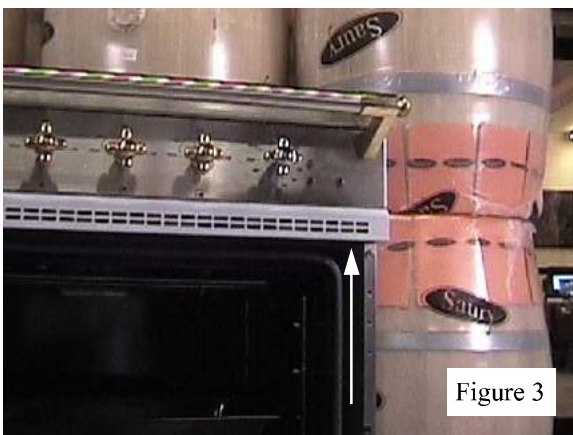


Figure 3



Figure 4

(Figure 4 is a view from the floor looking up)

3. Remove all of the oval headed stainless steel screws near each burner assembly.  
(Figure 5)

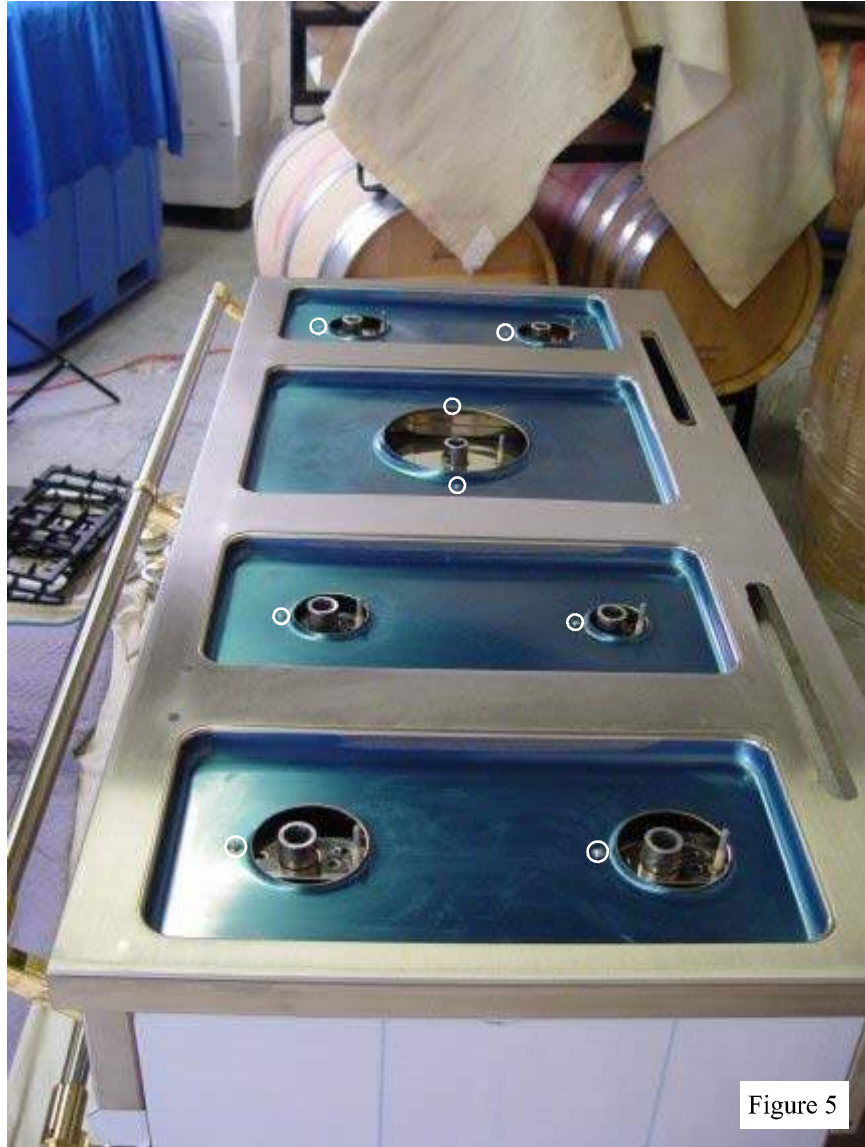



Figure 5

4. Lift the front of the range top up—like the hood of a car, and prop it open with a piece of wood. (Figure 6)



Figure 6

NOTE: if the range is equipped with the multicooker option, it is necessary to remove the protection plate under the multicooker's bowl (1 x 7mm bolt) and disconnect the drain hose from the drain valve and the water supply line.

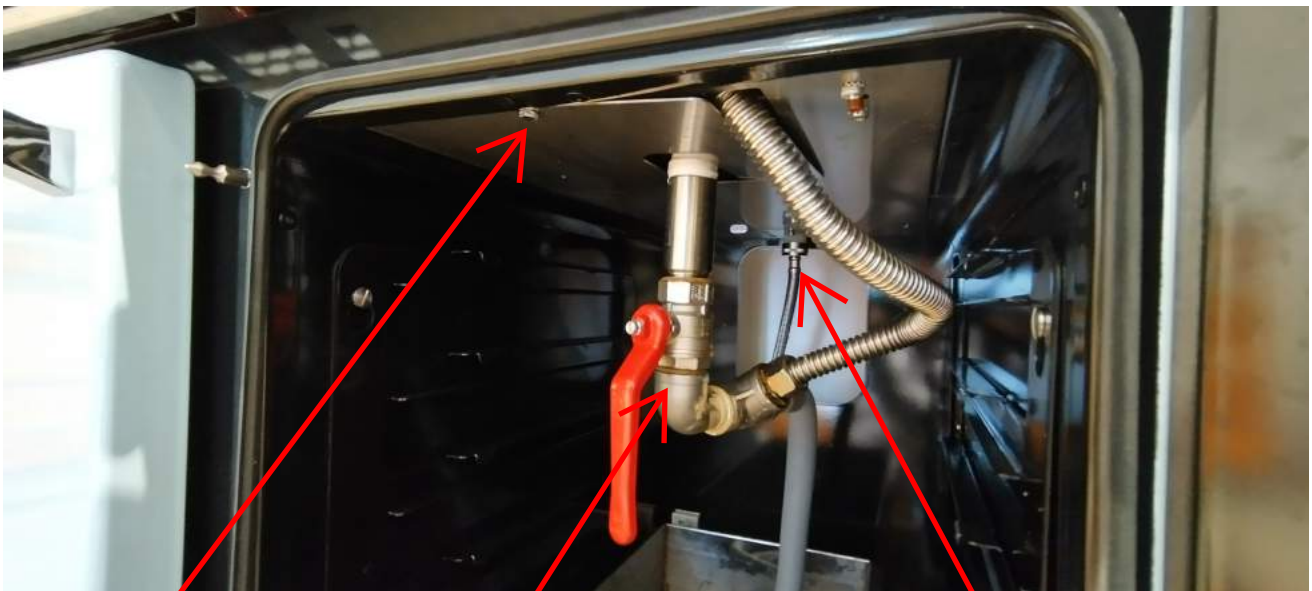

Protection plate - 7mm bolt

Drain valve

Water Supply line