


Top Burner Igniter Adjustment



To ensure optimal ignition of the top burners, the igniter should be adjusted so that the spark hits the lower edge of the upper rim of the brass burner cap, as shown:

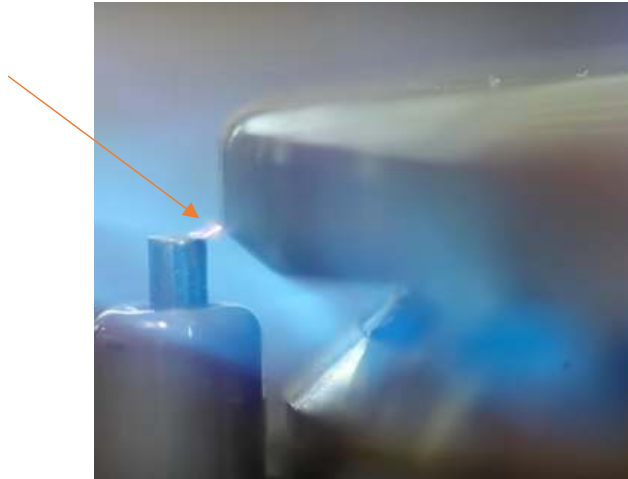

To adjust the igniter:

- Remove the cast-iron grate
- Remove the burner assembly (brass cap + aluminum body)
- Pinch the igniter, pull up, and adjust the brass nut up (to lower the igniter) or down (to raise the igniter)



- Put the burner assembly back in place and test for proper ignition.

It is possible that after a spill, or after cleaning the burner cap, some of the gas ports can be slightly obstructed and cause the burner to take longer than usual to ignite. In this case, rotating the brass cap slightly should help.